

# **User's Manual**

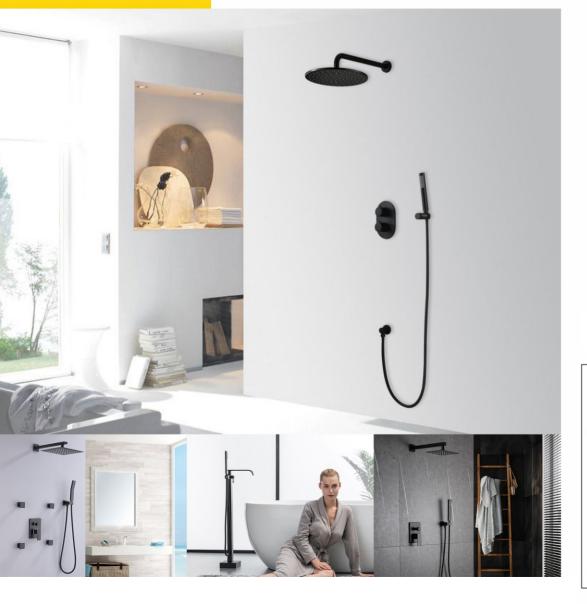

## **INSTALLATION INSTUCTIONS**

# **INSTALLATION MANUAL**

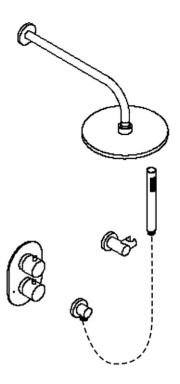

Yb0840







 










 








 
















## **INSTALL THE SHOWER**


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.



#### 1.Exploded view

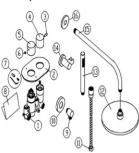

No.	Description	Qty
1	Main body	1
2	Panel	1
3	black cover	1
4	Divider valve	1
5	Thermostatic handle	1
6	button	1
7	Adaptor kit	3
8	User manual	1
9	Outlet	1
10	Outlet Decoration cover	1
11	Shower hose	1
12	Shower head	1
13	Hand shower	1
14	Fixed holder	1
15	Shower arm	1
16	Shower arm Decoration	1
	cover	
	1 2 3 4 5 6 7 8 9 10 11 12 13 14	1 Main body 2 Panel 3 black cover 4 Divider valve 5 Thermostatic handle 6 button 7 Adaptor kit 8 User manual 9 Outlet 10 Outlet Decoration cover 11 Shower hose 12 Shower head 13 Hand shower 14 Fixed holder 15 Shower arm

### 2.Installation steps

2.1 Disassemble the hand wheels and panel



2.11 Factory settings



2.12 After removing the black covers, use the small wrench in the adaptor Kit, Loosen the screws in the handles by hand and remove the handles. When removing the thermostatic hutton aligned with the 40  $^{\circ}\mathrm{C}$  in the panel, Do not turn the valve stem (There is a straight red or black line ). Otherwise, the temperature will be in accurate.

#### 2.2 Size for grooving and assembly



 
2.21 Main body size (for your reference, check actual size)



2.23 From ground to main body usually 35.43"~39.37" also can according to user height or user demand



2.22 Wall grooving design and size.(for your reference)



2.24 Joint pipe diagram

### 2.3 Main body built-in steps



2.31 Drill the hole in the wall. Beat expansion strip into the hole (there are 2 pieces expansion strips and 2 pieces self-tapping screws)



2.33 After tiling, assembly panel, decoration covers, handles in order, tighten the screw and put chrome cover into the original place.



 
2.32 Put the main body into the wall. Fixed with self-tapping screw. (please do not seal all the copper parts of thermostatic valve, and make sure it is easy for ongtime maintenance.)



2.34 Effect diagram

# **CLEANING CARE**

In order to keep the appearance of faucet clean, bright and good performance , please take care of the faucet as follows;



- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film,or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish , emery cloth , paper towel or scraper , etc.;
- 4.Do not use acid cleaner,or cleaner and soap with insoluble gran etc.;
- 5.In the process of use ,mud my accumulate in the bubbler and make the water flow show,The bubbler can be unscrewed, rinsed with water ,and then installed back in place.

