
 
User's Manual



INSTALLATION INSTUCTIONS

INSTALLATION MANUAL

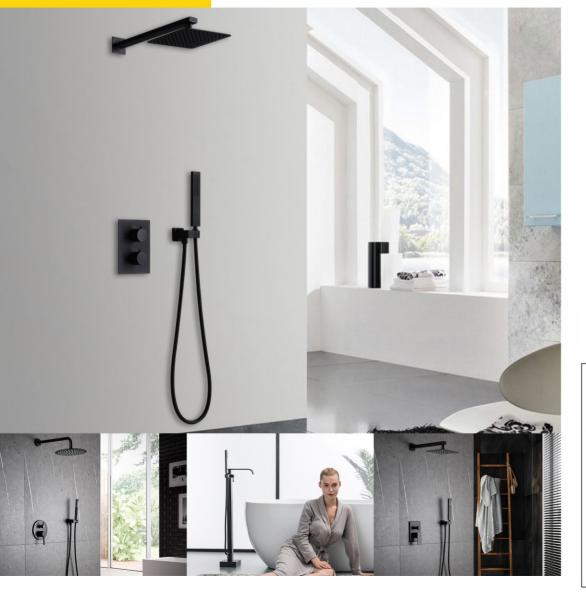



Yb0842









 




























INSTALL THE SHOWER


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




1.Exploded view

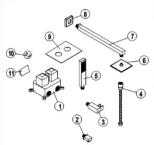


No.	Description	Qty
1	Thermostatic valve	1
2	Outlet	1
3	Fixed holder	1
4	Shower hose	1
5	Brass hand shower	1
6	Shower head	1
7	Shower arm	1
8	Decoration cover	1
9	Panel	1
10	Accessories	1
11	User manual	1

2.Installation steps

 2.1 Size for grooving and assembly





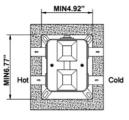

2.12 Wall grooving design and size.(for your reference)

2.2 Main body built-in steps



2.21 Drill the hole in the wall. Beat expansion stripinto the hole (there are 4 pieces expansion strip harden and 4 pieces self-tapping screw how many be used decided by actual situation)



2.22 Put the main body into the wall, fixed with self-tapping screw, please do not harder seal and make sure it is easy for longtime maintenance

2.24 Take off the upper cover of the

embedded box and test box screw

wheel,pull out the decoration cover

at the back end of the thermostatic handle, loosen the screw in the handle

out the hand wheel lever on the sailor

 
with the Wrench in the bag,take off the handle,when taking off the thermostatic

align the button with 38C °, and then lock

handle,pay attention to thermostatic button should be aligned with the 38 °C on the panel, do not turn the valve core and valve rod. Otherwise, there will be a temperature difference. After the pane is installed, install the handle again. Similarly, when the thermostatic handle is installed, do not turn the valve rod.




remove the upper cover of the Confirm that there is no leakage, pipeline and embedded box with



2.23 After connecting the pipeline, embedded box and test the water, and then cover the upper cover of the embedded box.at last.cover the



 
2.13 From ground to main body usually 35.43"~43.31" also can according to user height or user demand



the pipe must be connected with hot water on the left and cold water on the right when connecting. After the pipeline is buried, the main body can not be connected until the sediment in the pipeline is drained. (PPR water pipe requirements: water inlet 4 / 6 pipes, water outlet 4 pipes,water pipe self provided)




 2.25 Effect diagram



2.26 Size for thermostatic valve

 CLEANING CARE





- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film,or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish , emery cloth , paper towel or scraper , etc.;
- 4.Do not use acid cleaner,or cleaner and soap with insoluble gran etc.;
- 5.In the process of use ,mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water ,and then installed back in place.

