
ASSEMBLY INSTRUCTION

Patio Furniture Set

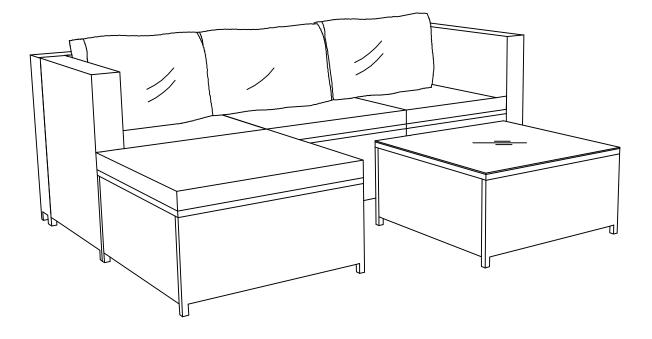

WF196749AAA, WF196750AAA WF196749AAC, WF196750AAC

Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- Tighten up all screws with tools gradually.
 If the screws are not aligned with holes during assembly,
 If the screws are not aligned with holes during assembly, the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

