

142X210MM

# 2 in 1 Swing Set User's Manual




PLEASE DO NOT RETURN PRODUCT TO THE STORE

If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.

E-Mail: [wmscr@comptree.net](mailto:wmscr@comptree.net)

Tel: 626-912-8886 Ext.100

PP199549AAL

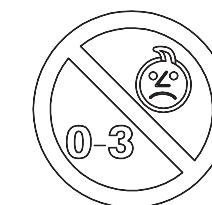

## EN

### ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.  
 -This product must be assembled by an adult.  
 -Keep a copy of your assembly instructions for future reference. This can be particularly hand for identification of parts if any after sales service is required.  
 -The EN 71-8, chapter 4-6 standard requires a 40cm minimum distance between the ground and a 2 person swing and a 35cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after sales service.  
 -We advise that the swing set is not faced towards the sun.  
 -Before commencing , check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.  
 -Dispose of packaging thoughtfully.  
 -Do not allow children to play with packaging.

### SAFETY ADVICE

-This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 12 years with a maximum weight of 50kg. It must be used under adult supervision.  
 -As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.  
 -This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites , hotels, public leisure areas, etc.  
 -The swing set should be set up on a flat surface 2 metres away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.  
 -This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other such soft surfaces.  
 -This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.  
 -Anchors should be placed level with or below ground level in order to reduce tripping hazards.  
 -The anchorage must be checked regularly ,in addition to the hooks and fixtures .  
 -Dispose of packaging thoughtfully.  
 -Do not allow children to play with packaging.

### FIXING INTO THE GROUND

1-Assemble the swing set completely and place it in the desired place.  
 2-Locate and mark the position for the sealing legs.  
 3-Check the dimensions showed on the diagram, and correct if necessary.  
 4-Under the four feet, mark a square of 350x350mm and dig a 350mm deep hole.  
 5-Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.  
 6-Place the sealing legs in the concrete in the located place (see point 2).Make sure the drilled end of the sealing legs is above the level of the concrete.  
 7-Once the concrete is set , screw the feet into the sealing legs .  
 8-Ensure that the concrete is completely dry before using the swing  
 9-Cover the concrete with soil.  
 We strongly advise checking this anchoring periodically

### MAINTENANCE

All metal parts are powder coated for rust protection; however in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.  
 The surfaces of all the parts should be checked at least once a month , especially for the fixtures such as hooks on the overhead beam . If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.  
 All parts that are under constant friction should be oiled regularly with a suitable lubricant .  
 The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed.  
 It is advised to remove the apparatus during the winter period , when not in use ,to avoid any deterioration due to bad weather conditions.  
 Check for signs of wear , especially where swinging apparatus plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration , the apparatus should be replaced .

All used apparatuses and /or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.

### PRACTICAL ADVICE

Frequent questions and observations

### Safety

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

### Comfort

If the swing set develops a squeak apply a suitable gel lubricant . Do not use liquid lubricant as it will run down the fixings and apparatus .The height of the swing can be adjusted using the plastic cyclist fixture. By pulling the rope through the fixture , the height of seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

This Swing Set must be used under adult supervision.  
Keep any additional components , they may be useful for later operation of maintenance.  
**CAUTION!** Fall danger.

C3 x8	C52 x2	S5 x1	S7 x1
C40 x1	C51 x2	BH3 x2	BH4 x4
C50 x2	YD2 x4	YB21 x4	BH19 x2
BH0 x2	B3 x2	BH20 x2	YB22 x2
SZ2 x4	Z4 x2	Z5 x8	Z8 x2
T4 x4	F2 x8	F4 x2	B6 x30
B0 x10	L8 x16	L6 x8	G1 x2
X8 x4	A4 x2	K10K13 x1	

