



# 142\*210mm

## 3 in 1 Swing Set

### User's Manual

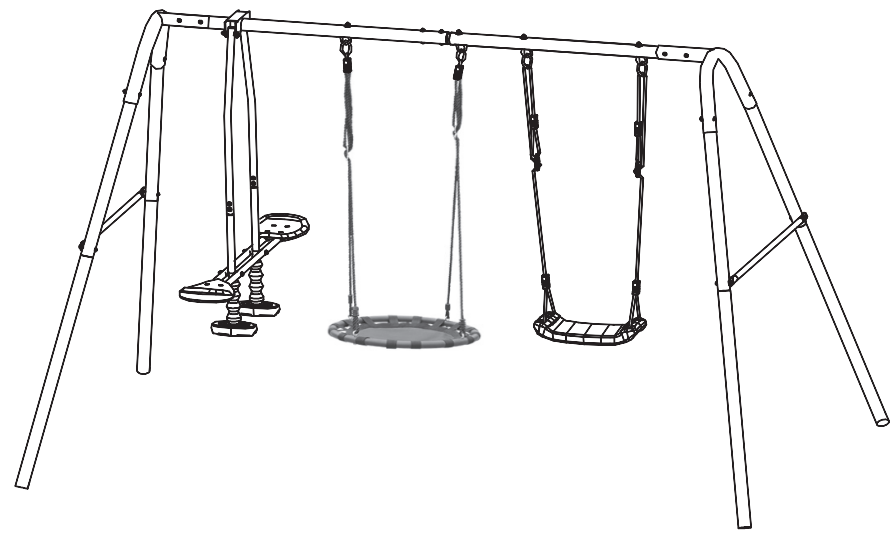

**PLEASE DO NOT RETURN PRODUCT TO THE STORE**  
If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.

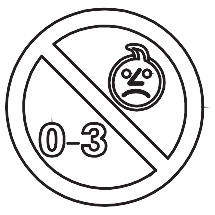

E-Mail: [wmcscr@comptree.net](mailto:wmcscr@comptree.net)  
Tel: 626-912-8886 Ext.100

PP199552AAL

#### EN

#### ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.  
This product must be assembled by an adult.  
Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.  
The EN 71-6, chapter 4.4 standard requires a 15cm minimum distance between the ground and a 2 person swing and a 15cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after sales service.  
We advise that the swing set is not faced towards the sun.  
Before commencing, check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.

#### DISPOSE OF PACKAGING THOUGHTFULLY

-Do not allow children to play with packaging.

#### SAFETY ADVICE

-This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 12 years with a maximum weight of 50kg. It must be used under adult supervision.  
-As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.  
-This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.

-The swing set should be set up on a flat surface 2 metres away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.  
-This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.  
-This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.

-Anchors should be placed level with or below ground level in order to reduce tripping hazards.  
-The anchorage must be checked regularly in addition to the hooks and fixings.  
-Dispose of packaging thoughtfully.  
-Do not allow children to play with packaging.

**FIXING INTO THE GROUND**  
1- Assemble the swing set completely and place it in the desired place.  
2- Locate and mark the position for the scaling legs.  
3- Check the dimensions showed on the diagram, and correct if necessary.  
4- Under the four feet, mark a square of 300\*350mm and dig a 150mm deep hole.  
5- Fill these holes with concrete following the diagram of the notes. The top of the concrete should not exceed ground level.  
6- Place the scaling legs in the concrete in the located place (see point 2) Make sure the drilled end of the scaling legs is above the level of the concrete.  
7- Once the concrete is set, screw the feet into the scaling legs.  
8- Ensure that the concrete is completely dry before using the swing.  
9- Cover the concrete with soil.  
We strongly advise checking this anchoring periodically.

**MAINTENANCE**  
All metal parts are powder coated for rust protection, however in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.  
The surfaces of all the parts should be checked at least once a month, especially for the fixings such as hooks on the overhead beam. If the fixings and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixings as those originally provided.  
All parts that are under constant friction should be oiled regularly with a suitable lubricant.  
The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed.


It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.  
Check for signs of wear, especially where swinging apparatus plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the apparatus should be replaced.  
All used apparatus and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.

**PRACTICAL ADVICE**  
Frequent questions and observations

**Safety**  
Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

**Comfort**  
If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus. The height of the seat can be adjusted using the plastic cyclist fixings. By pulling the rope through the fixings, the height of the seat can be adjusted to suit the user.  
The dimensions given are indicative only, they may vary according to the assembly method.

This Swing Set must be used under adult supervision.  
Keep any additional components, they may be useful for later operation of maintenance.  
**CAUTION!** Fall danger.

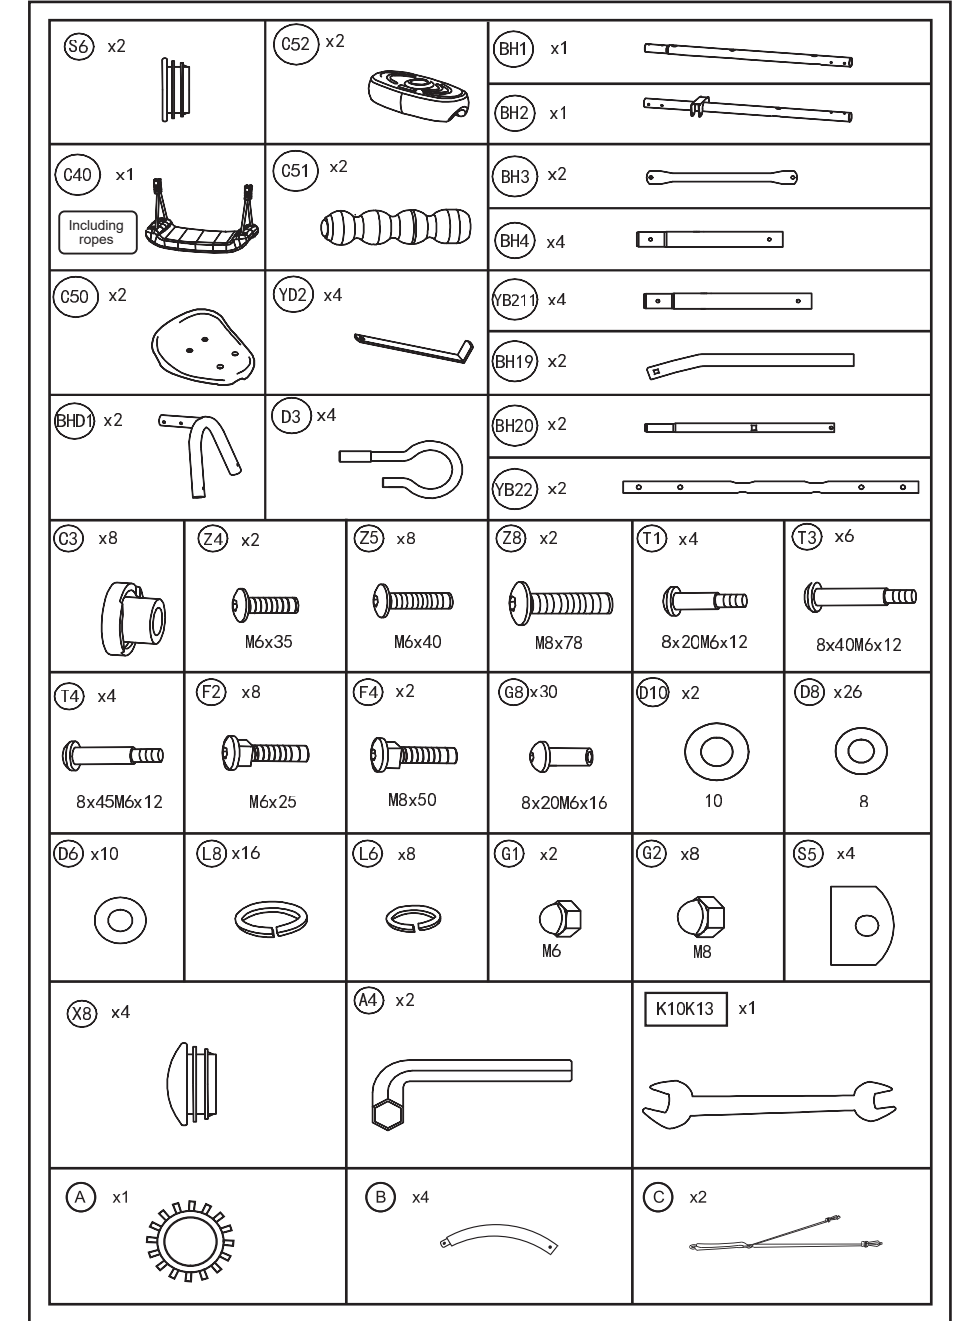

2

