


Remote Controller User Manual

- (1). Supply Voltage: DC 3.0V, Battery: 2*1.5V AAA (not included)
- (2). Frequency 2.407GHz-2.473GHz (Peak output power: 5dBm)
- (3). Instructions

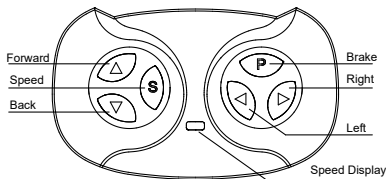

1. To connect the remote controller to the car, turn off the switch on the car first.
2. Hold down "▲" and "▼" simultaneously for 3 seconds until the light indicator flashes.
3. Turn on the switch on car, the light stops flashing. The remote controller is now paired and ready to use.
4. The remote controller enters standby mode after 10 seconds of inactivity. Press any button to wake it up.

5. Speed Button

Press "S" to operate the bulldozer move in slow, medium, high speed.

1 light is low speed, 2 lights mean medium speed, 3 lights mean high speed.

When driving backwards, the car can only run in low speed.

6. Brake Button

Press "P" once to hold the brake, all lights flash. Press it again to release the brake.

※ The remote controller only can be used under adult's guidance.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.