


ITEM #: COD-WD-SM/WELFPB-2

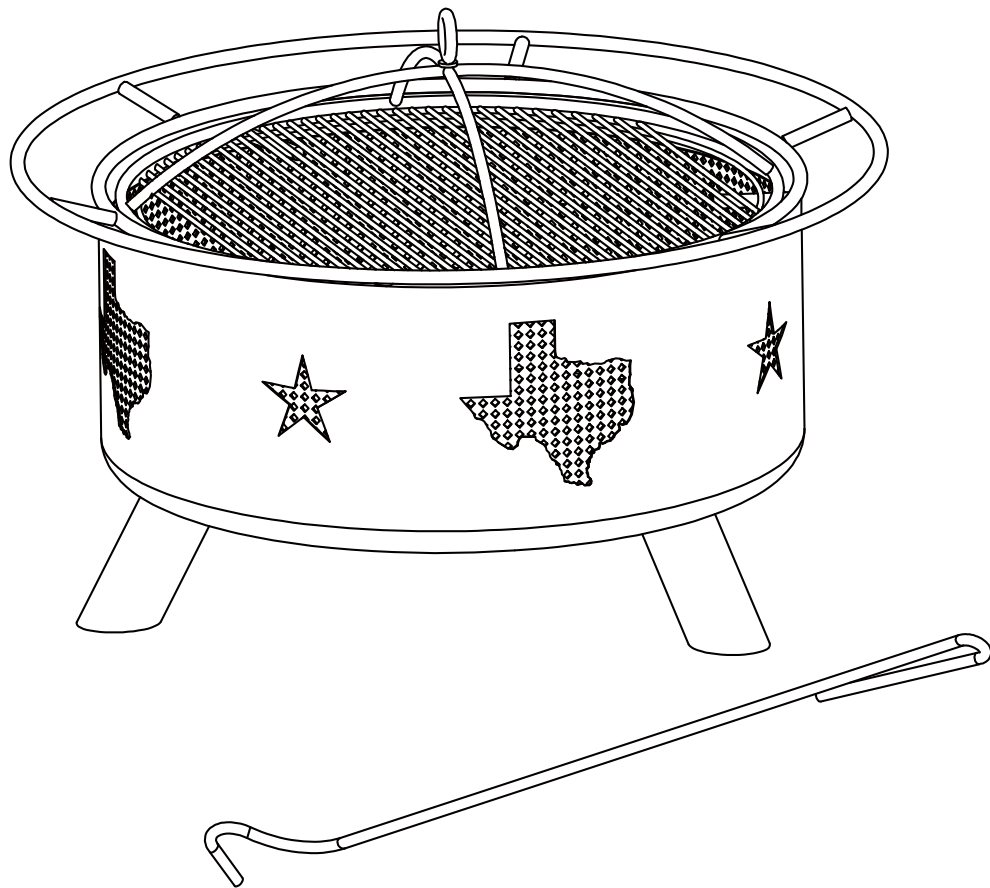

READ INSTRUCTION MANUAL BEFORE OPERATE THIS PRODUCT

INSISTS ON THE HIGHEST STANDARD OF QUALITY IN MANUFACTURING.

IN CASE OF ANY ISSUES DO NOT RETURN TO STORE.

CALL 1-800-379-2185 OR E-MAIL US AT info@calell.com WITH QUESTIONS OR WARRANTY ISSUES.

OUR OFFICE HOURS ARE MONDAY TO FRIDAY 8 AM – 4 PM (PST).

WE WILL BE BACK TO YOU AS QUICKLY AS POSSIBLE.

WARNINGS



WARNING

FOR OUTDOOR USE ONLY



WARNING

READ THE OPERATION , MAINTENANCE INSTRUCTION THOROUGHLY BEFORE USING THIS PRODUCTS
Save these instructions for future reference .




WARNING FOR YOUR SAFETY

1. ⚠ DO NOT use this fire pit without reading all warnings, cautions and instructions .
2. ⚠ This item is for outdoor use only , and shall not be used in a building ,garage , or any other enclosed area
3. ⚠ DO NOT use this fire pit for indoor heating , TOXIC carbon monoxide fumes can accumulate and cause asphyxiation or death .
4. ⚠ This fire pit is NOT for commercial use
5. ⚠ This fire pit is Not be operated by children
6. ⚠ This fire pit is Not be used in or on boats or recreational vehicles
7. ⚠ Always use in accordance with all applicable local ,state and national codes . Contact your local fire department for details on outdoor burning .
8. ⚠ When using this fire pit , exercise the same prescriptions you would with any open fire
9. ⚠ The use of alcohol ,prescription or non-prescription drugs may impair the customer's ability to properly assemble or safety operate this fire pit .
10. ⚠ This fire pit is for use with dry ,seasoned hardwood . It will burn hotter ,more completely and create less smoke .
11. ⚠ DO NOT burn charcoal brique ,lump charcoal ,manufactured logs ,drifted wood , trash ,leaves , papers , cardboard , plywood , painted or stained or pressure treated wood . Avoid using softwoods such as pine or cedar that can throw sparks .
12. ⚠ DO NOT alter this fire pit any manner
13. ⚠ DO NOT use in an explosive atmosphere , Keep outdoor area clean and free from combustible materials ,gasoline and other flammable liquids .
14. ⚠ Always empty this fire pit before each use .
15. ⚠ DO NOT wear flammable or loose clothing when operating this fire pit .
16. ⚠ DO NOT use in windy conditions .
17. ⚠ DO NOT lean over this fire pit tools when adding or moving logs
18. ⚠ This fire pit should be thoroughly inspected and cleaned on a regular basis
19. ⚠ Keep all electrical cords away from a hot fire pit .
20. ⚠ All surfaces of this fire pit are hot when in operation . To avoid burns , do NOT touch fire pit until it has completely cooled unless you are wearing protective gear . Never touch ashes or coals to see if they are hot
21. ⚠ DO NOT leave a lit fire pit unattended ,especially around children and pets
22. ⚠ DO NOT remove ashes or coals until they are completely extinguished
23. ⚠ DO NOT use gasoline or other highly volatile fluid to ignite wood or charcoals .
24. ⚠ DO NOT place fire pit on grass or wood deck while in use . Heat may be conducted through bottom of fire pit and scorch grass or wood . resulting in fire ,
25. ⚠ DO NOT use in windy conditions
26. ⚠ DO NOT burn paper or any other lightweight material that may float away and begin a fire
27. ⚠ Barbecue mitts or poker should be used when removing or replacing screen over a hot fire pit

28. ⚠ Use safety screen at all time when fire pit is lit ,Safety screen is designed to minimize floating debris, which may start a fire causing damage to person or property
29. ⚠ DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance
30. ⚠ Do not store or use an LP gas cylinder with 10 feet (3.05m) of this fire pit while it is in operation ,.
31. ⚠ Do not use in an explosive atmosphere . Keep outdoor area clean and free from combustible material ,gasoline and other flammable liquids.
32. ⚠ Using long ,sturdy fire pit tools when adding or moving logs
33. ⚠ DO NOT place a hot spark guard or hot fire pit tools onto combustible surface such as grass , wooden deck or furniture
34. ⚠ Avoid breathing smoke from the fire and avoid getting it into your eyes
35. ⚠ This fire pit should be thoroughly inspected and cleaned on a regular basis
36. ⚠ After a period of storage and/or non-use , check for signs of damage and creosote build-up
37. ⚠ Death serious injury or damage to property may occur if the above is not followed exactly .

PACKAGE CONTENTS

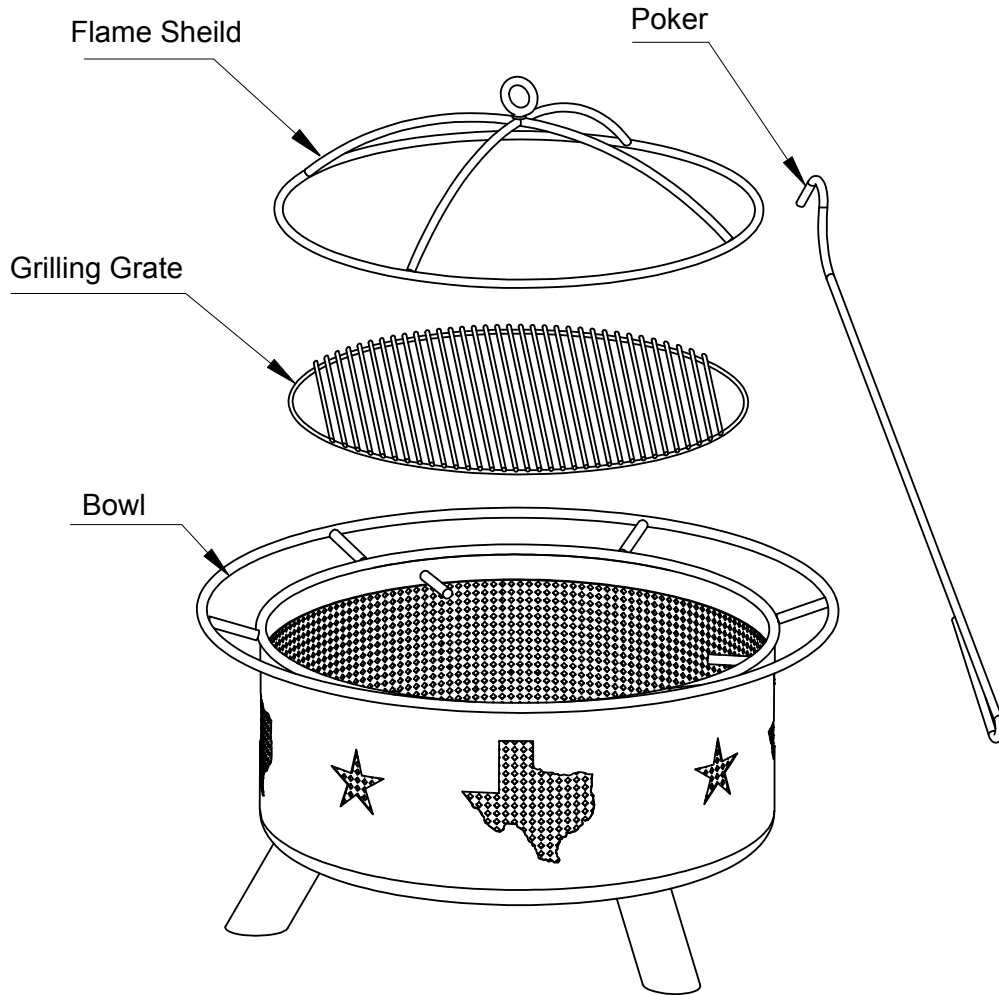

PART	DESCRIPTION	QUANTITY
A	Poker	1
B	Flame Shield	1
C	Grilling Grate	1
D	Bowl	1

No assembling required .

Lighting :

1. Make sure there is only a small amount of ash in the bottom of the bowl
2. Place a layer of dry kindling or natural fire starter onto the center of grid
3. Place above that a layer of dry seasoned hardwood that is no more than 3/4 the diameter of the bowl .
4. Use a match to light kindling or fire -starter

Tending the Fire

You may need to shift and /or add logs for an ideal experience .

DO NOT place a hot screen or hot fire pit tools onto combustible surfaces such as grass wooden deck or furniture .

1. Using the Flame Shield that is provided and heat resistant gloves , carefully remove screen ,
2. Wait until glowing coals have developed before adding any additional wood ,. If additional wood is required , place wood on top coals be careful not to shift ashes

Extinguishing :

1. Allow fire to burn itself out
2. DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit

Inspecting :

This fire pit should be inspected on a regular basis to ensure product safety and longer product life

DO NOT attempt to inspect this fire pit until the fire is COMPLETELY out and cool to the touch

1. Check components for any signs of damage or rust.
2. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

DO NOT attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.

DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

DO NOT clean any part of this fire pit in a self cleaning oven as it may damage the finish .

1. Wipe exterior surface with a mild dishwashing detergent or baking soda.
2. For stubborn surface use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse and clean with water.
4. Remove built -up creosote from components with a chimney cleaning product.

Storage

DO NOT move or store this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Once the fire is out , coals are cold and fire pit is cool to the touch , remove ashes and properly dispose.
2. Store the fire pit in a dry location to maximize product life.
3. Store assembled in a location away from children and pets.
4. Please use cover to cover the whole fire pit when not in use