

## **ASSEMBLY INSTRUCTION**

## **CORNER SOFA SET**

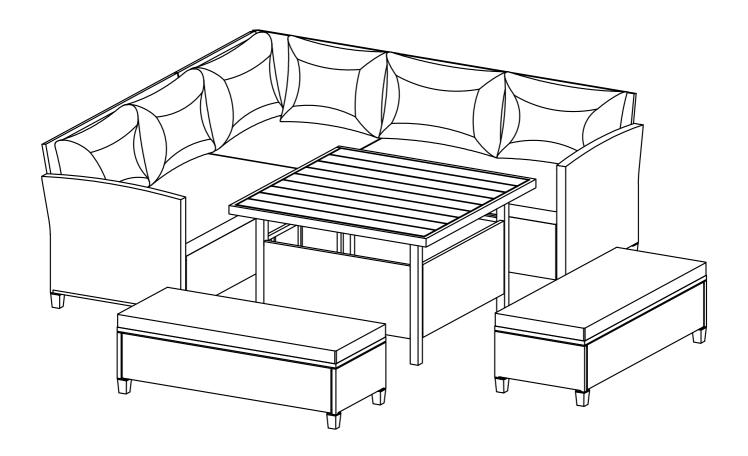

WF191811

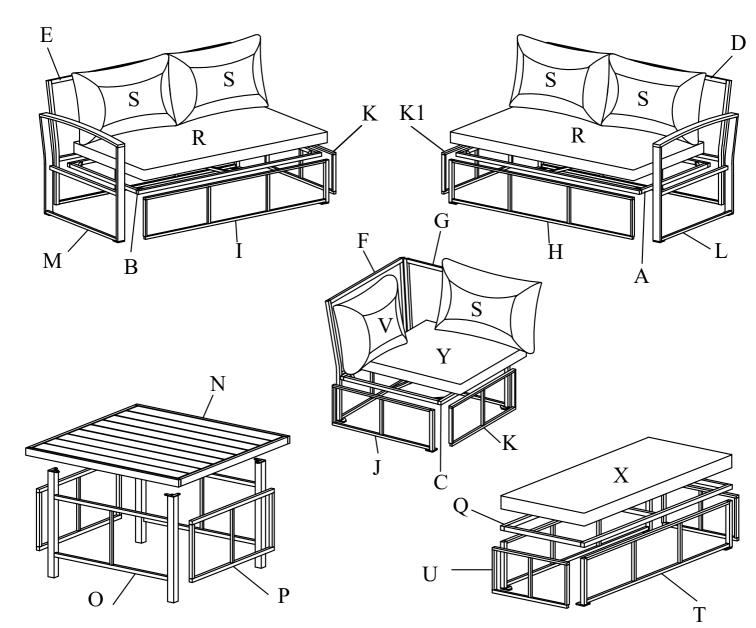

## Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.


2. Place the item on a flat ground to adjust and make sure it remains stable.


3. Tighten up all screws with tools gradually.

4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.


5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.

6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

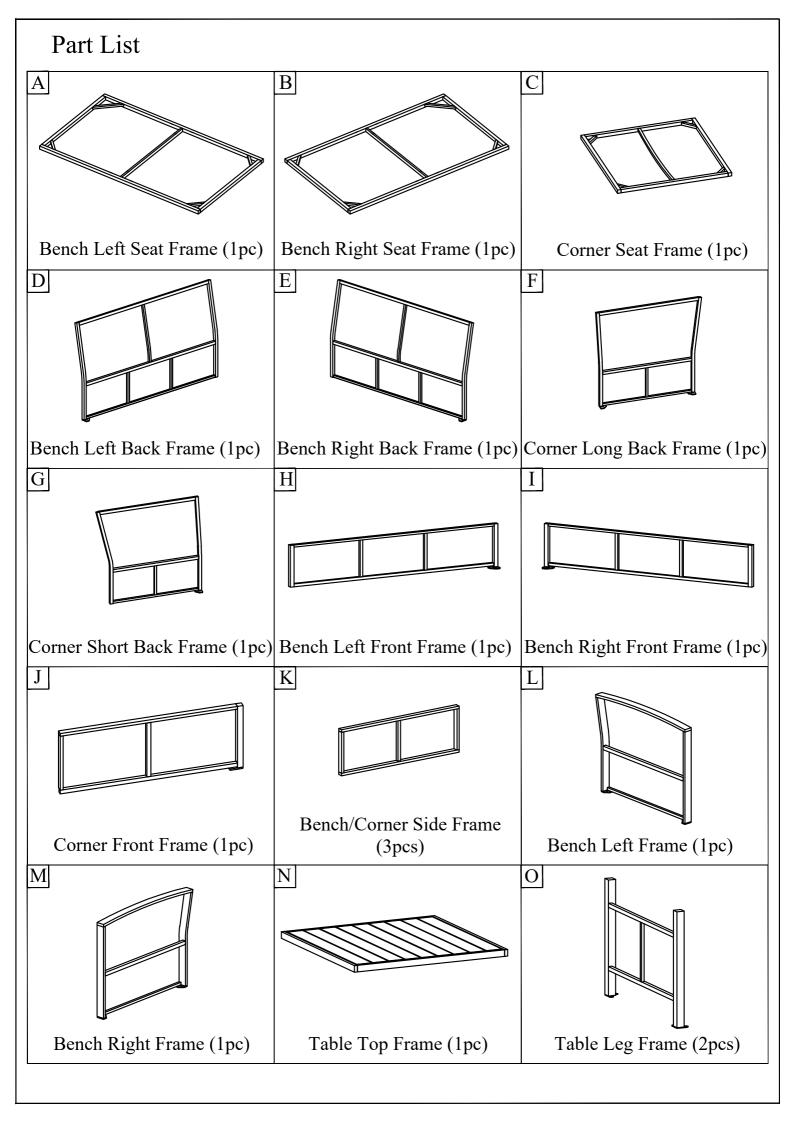


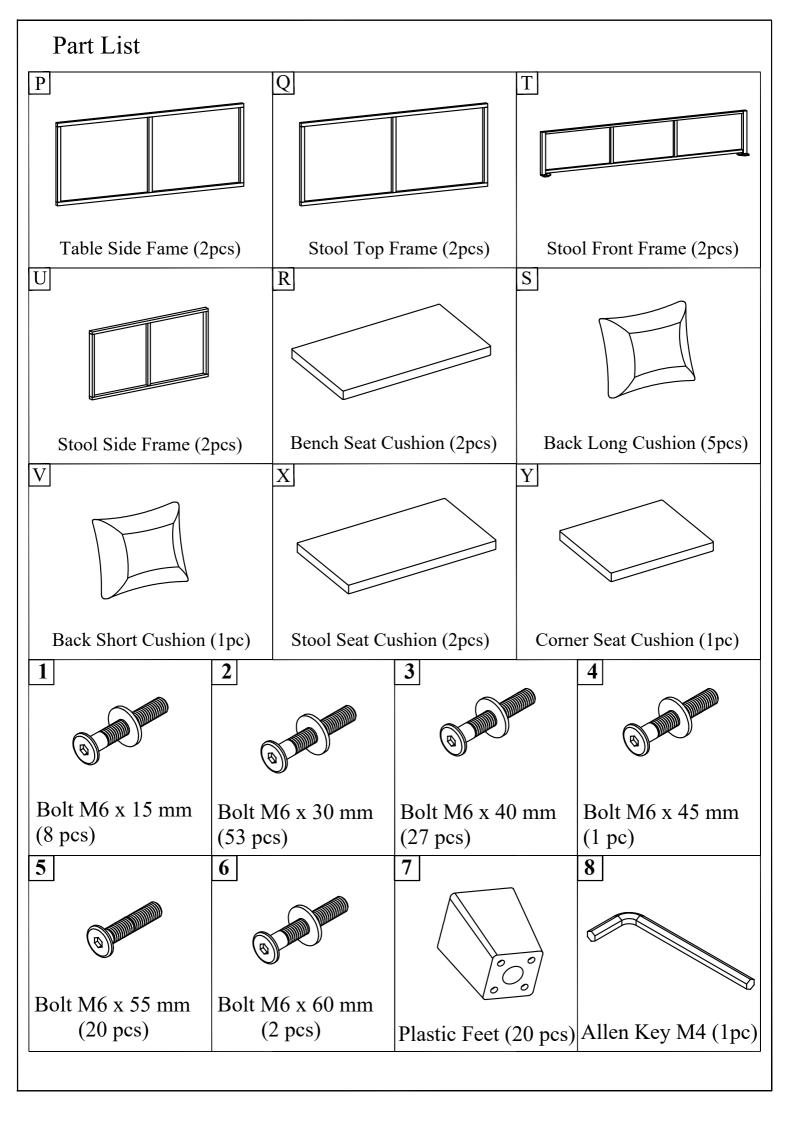


STEP 1 (Bench Left Assembly)
Connect Bench Left Seat Frame (A) & Bench Left Back Frame (D) with Bolt (3)

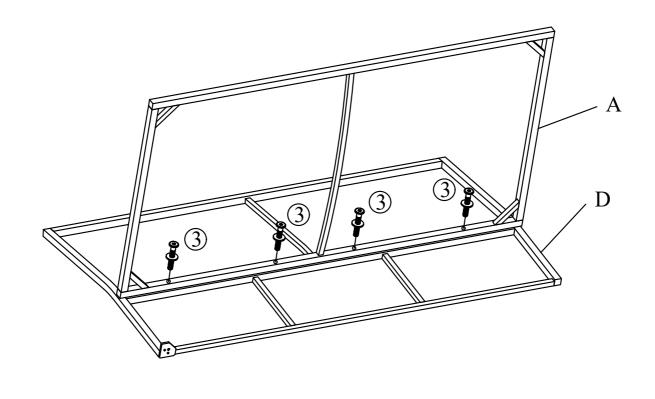


STEP 2
Connect part from STEP 1 & Bench Left Frame (L) with Bolt (3), (6)

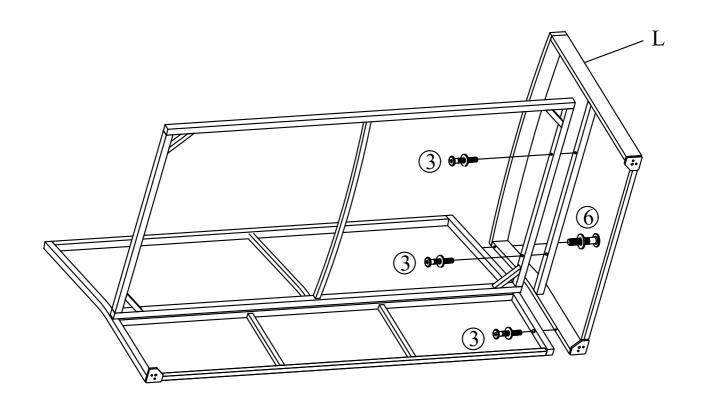

STEP 3
Connect part from STEP 2 & Bench Left Side Frame (K1) with Bolt (2)

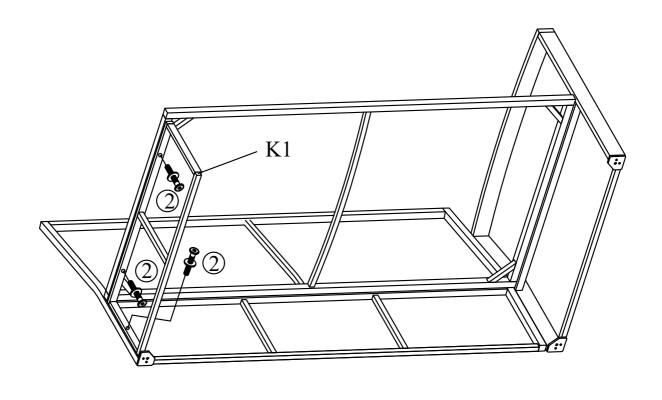


STEP 4
Connect part from STEP 3 & Bench Left Front Frame (H) with Bolt (2)

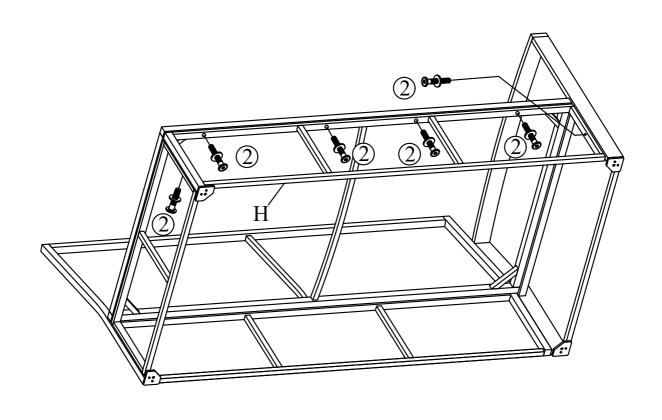


STEP 5
Connect part from STEP 4 & Plastic Feet (7) with Bolt (5)


STEP 6
Put on Bench Cushion (R), Back Long Cushion (S) to complete Bench

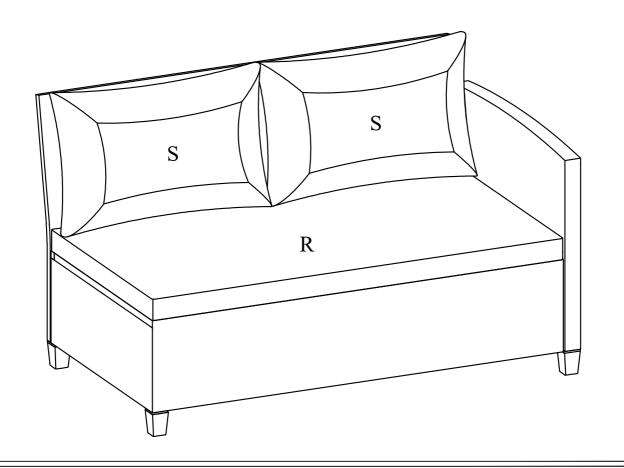


STEP 7 (Bench Right Assembly)
Connect Bench Right Seat Frame (B) & Bench Left Back Frame (E) with Bolt (3)

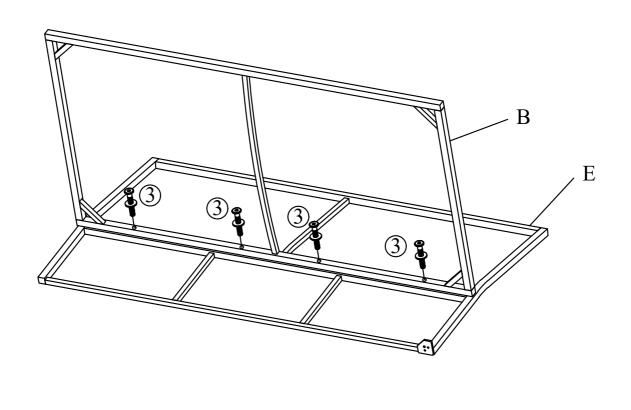


STEP 8
Connect part from STEP 7 & Bench Right Frame (M) with Bolt (3), (6)

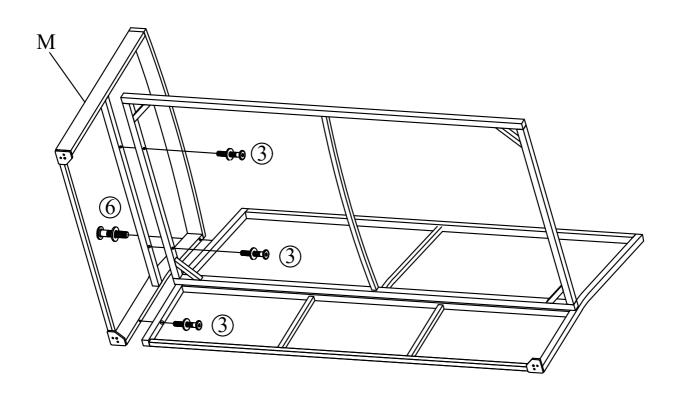

STEP 9
Connect part from STEP 8 & Bench Right Side Frame (K) with Bolt (2)

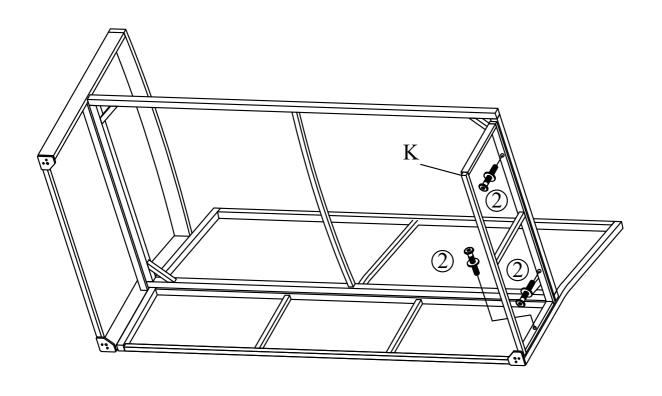


STEP 10
Connect part from STEP 9 & Bench Right Front Frame (I) with Bolt (2)

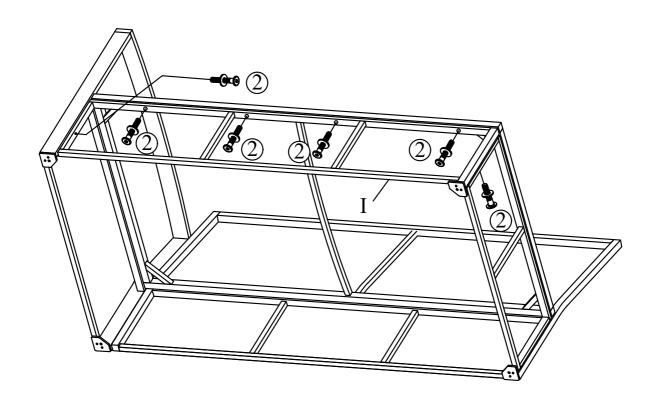


STEP 11 Connect part from STEP 10 & Plastic Feet (7) with Bolt (5)

STEP 12
Put on Bench Cushion (R), Back Long Cushion (S) to complete Bench

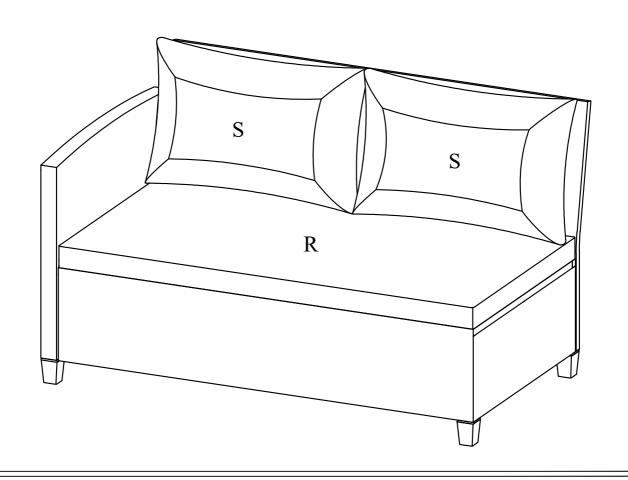


STEP 13 (Corner Assembly) Connect Corner Seat Frame (C) & Corner Short Back Frame (G) with Bolt (3)

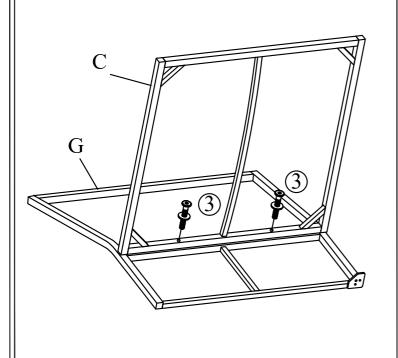


STEP 14


Connect part from STEP 13 & Corner Long Back Frame (F) with Bolt (3), (4)

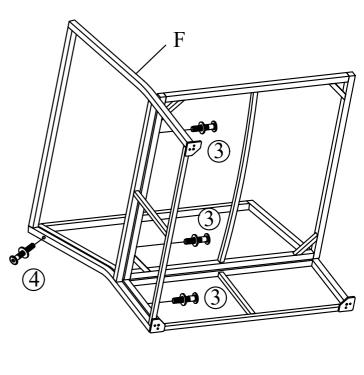


STEP 15 Connect part from STEP 14 & Corner Side Frame (K) with Bolt (2)

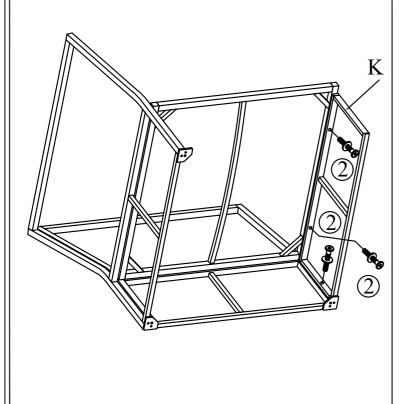

STEP 16 Connect part from STEP 15 & Corner Front Frame (J) with Bolt (2)

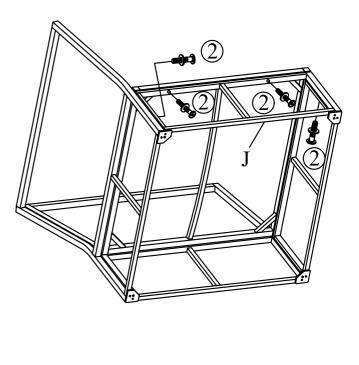


STEP 17
Connect part from STEP 16 & Plastic Feet (7) with Bolt (5)

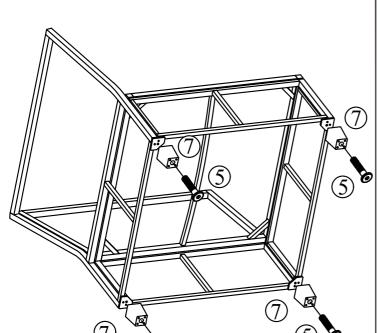


STEP 18


Put on Corner Seat Cushion (Y), Back Long Cushion (S) & Back Short Cushion (V) to complete Corner

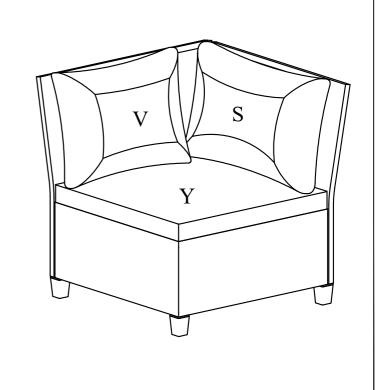

STEP 19 (Stool Assembly) Connect Stool Top Frame (Q) & Stool Side Frame (U) with Bolt (2)

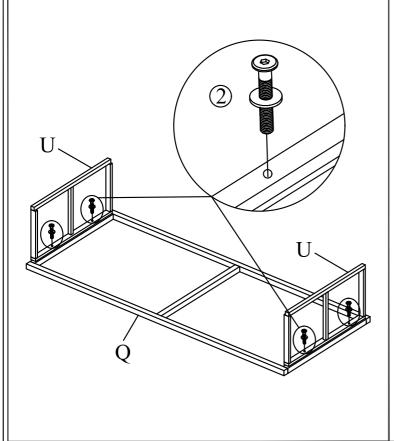


STEP 20 Connect part from STEP 19 & Stool Front Frame (T) with Bolt (2)

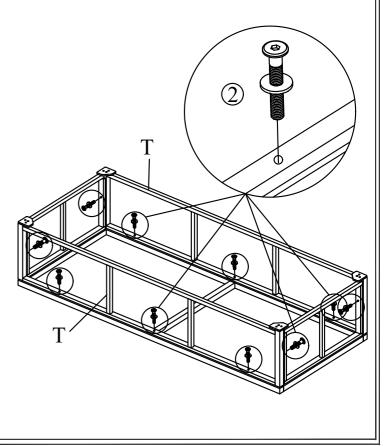


STEP 21

Connect part from STEP 20 & Plastic Feet (7) with Bolt (5)

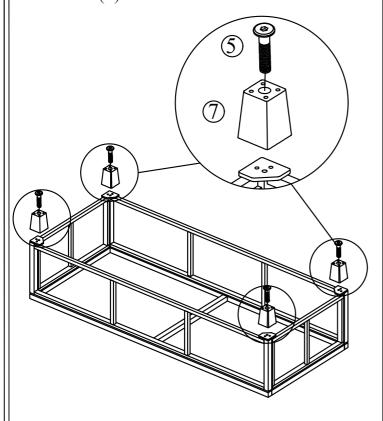


## STEP 22

Put on Stool Seat Cushion (X) to complete Stool

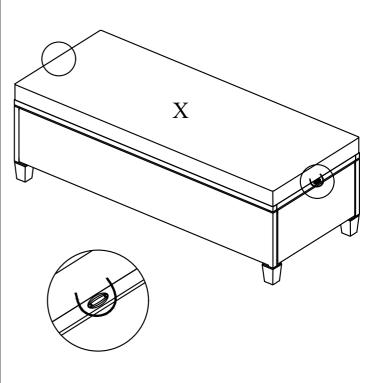

STEP 23 (Table Assembly)
Connect Table Top Frame (N) & Table Leg
Frame (O) with Bolt (1)

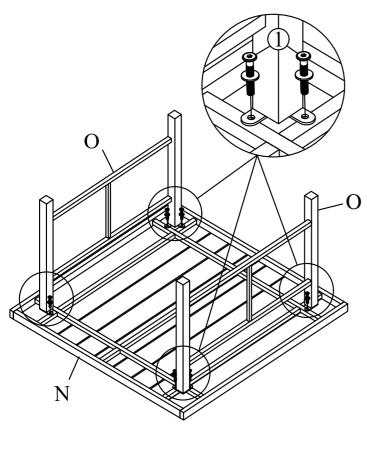

STEP 24

Connect part from STEP 23 & Table Side Frame (P) with Bolt (3)

